

# FS freestanding bathtub

## Installation instructions




video



PDF





- SI** SP kopalna kad - navodilo za vgradnjo
- HR** FS samostojeća kada – upute za ugradnju
- SRB** Samostojeća kada FS – uputstvo za ugradnju
- MK** Самостојна када FS – упатства за инсталација
- RU** Отдельностоящая ванна FS - инструкция по установке
- UA** Автономна ванна FS — інструкція з монтажу
- HU** FS szabadon álló kád - beépítési útmutató
- RO** Cadă de baie freestanding FS - instrucțiuni de instalare
- GB** FS freestanding bathtub – installation instructions
- DE** FS Freistehende Badewanne – Einbauanleitung
- IT** Vasca freestanding FS - istruzioni per l'installazione
- FR** Baignoire autoportante FS - instructions d'installation

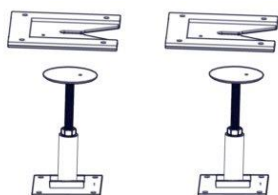


Id.: 208076 MK 22 Julij 2024/4


**kolpa·san**  
by KOLPA

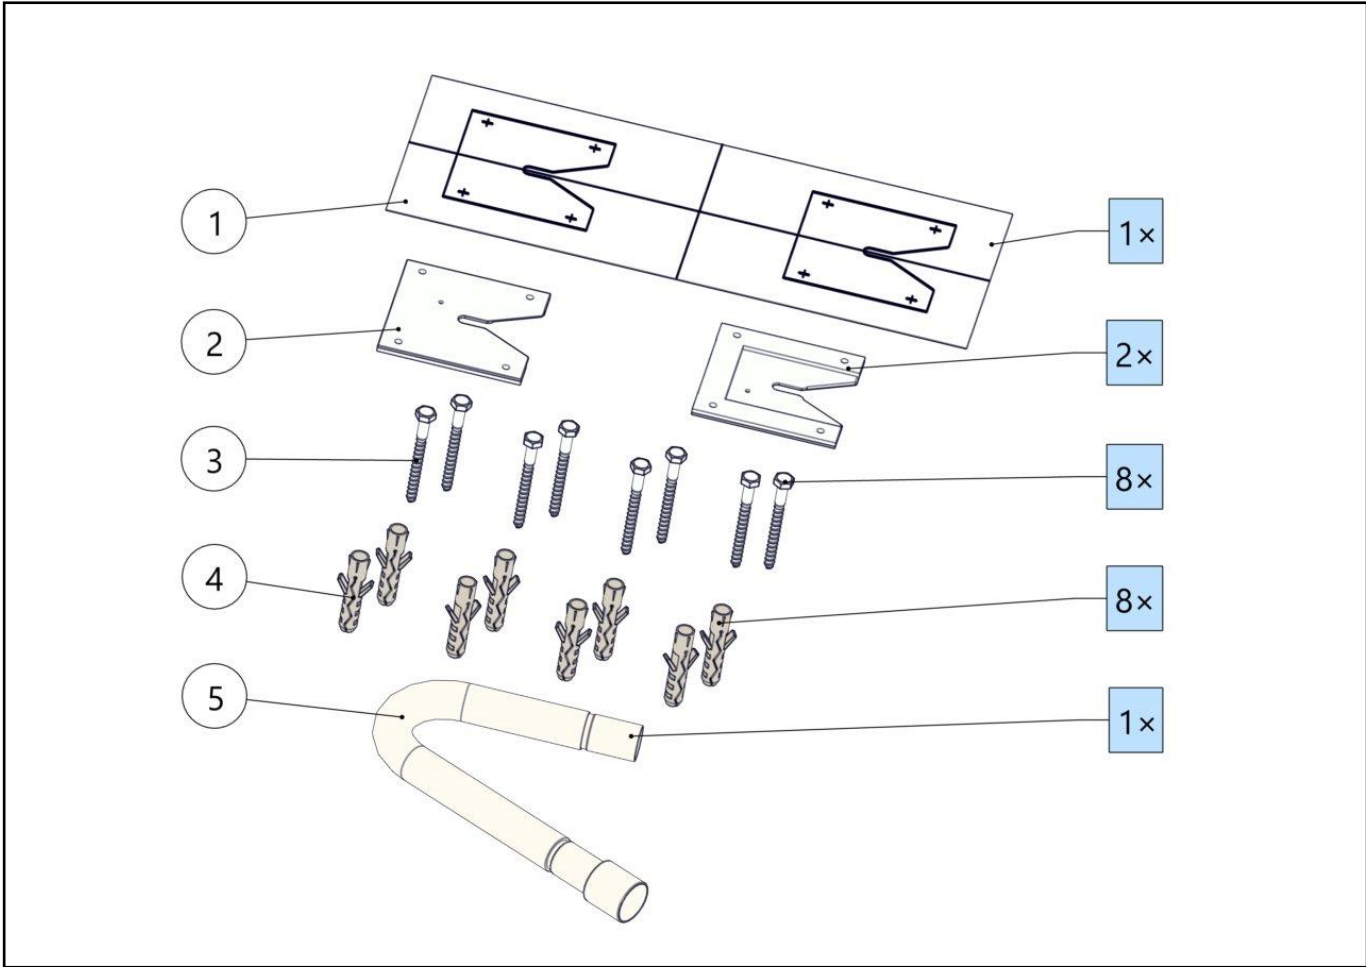
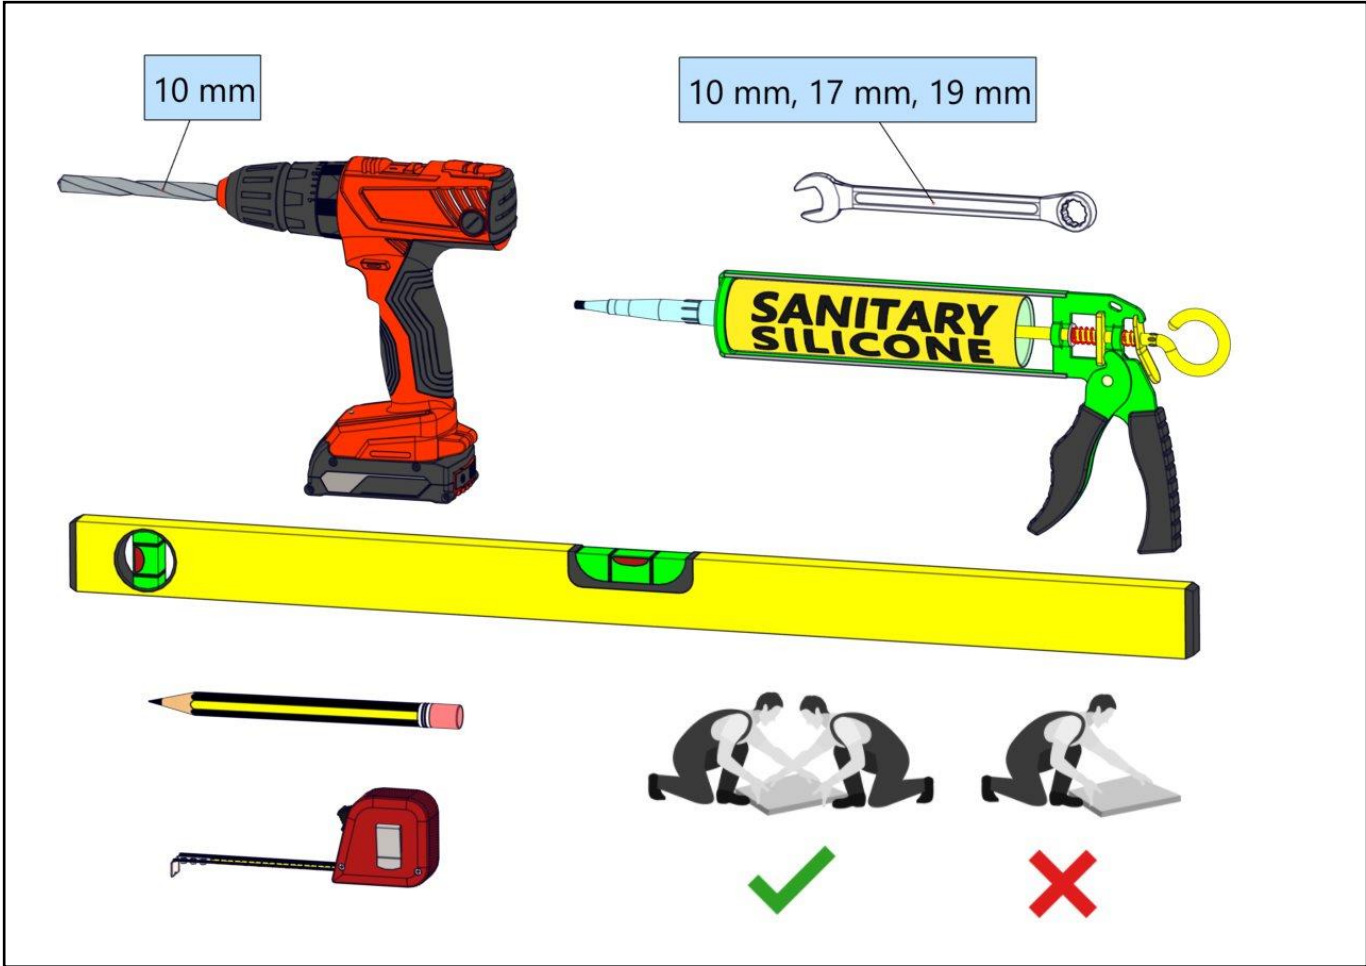




1


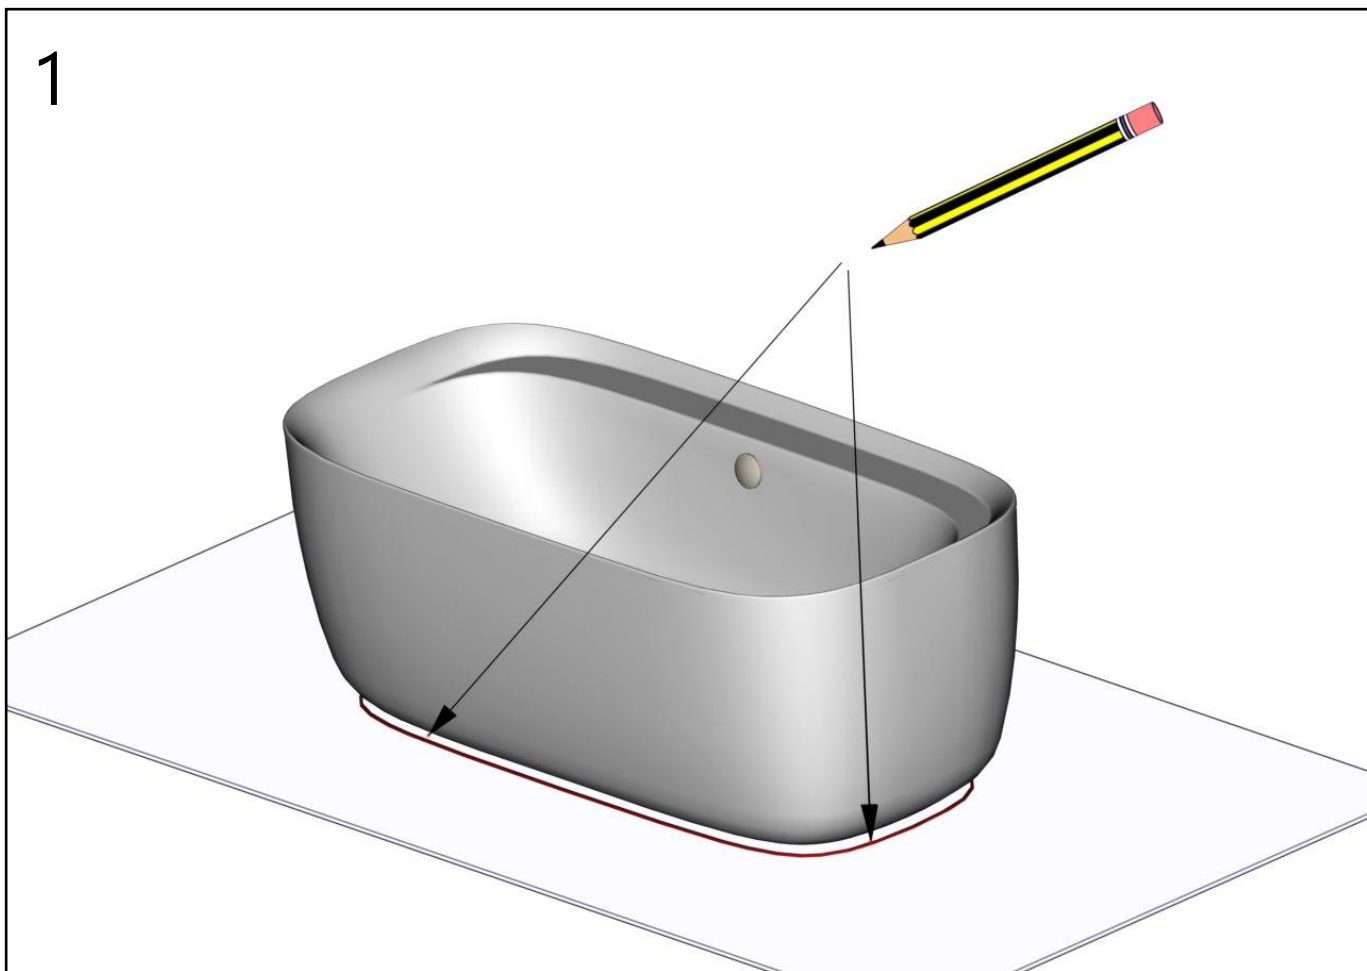


2


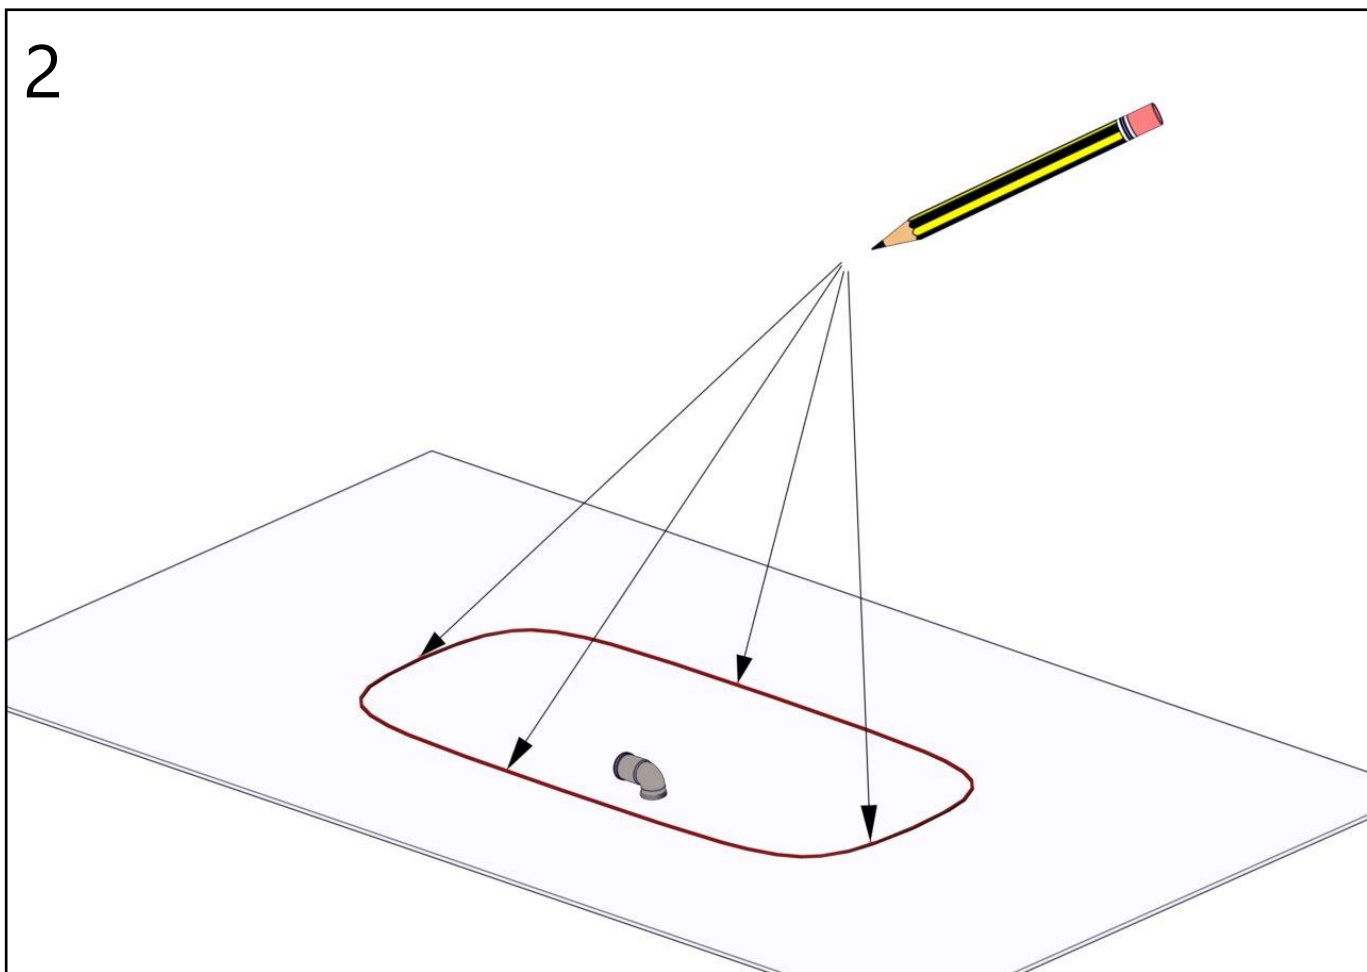


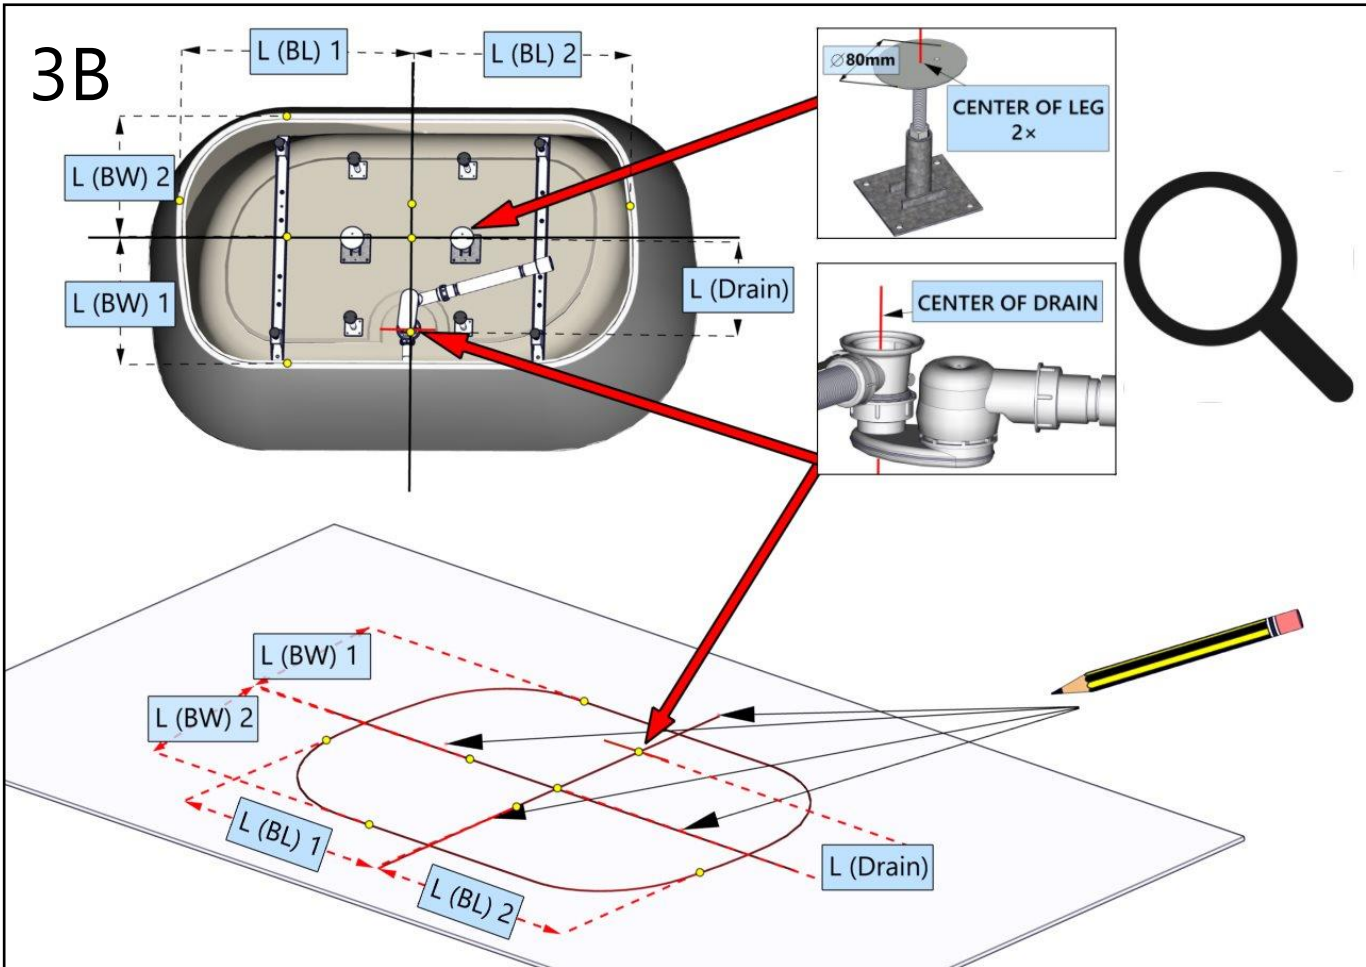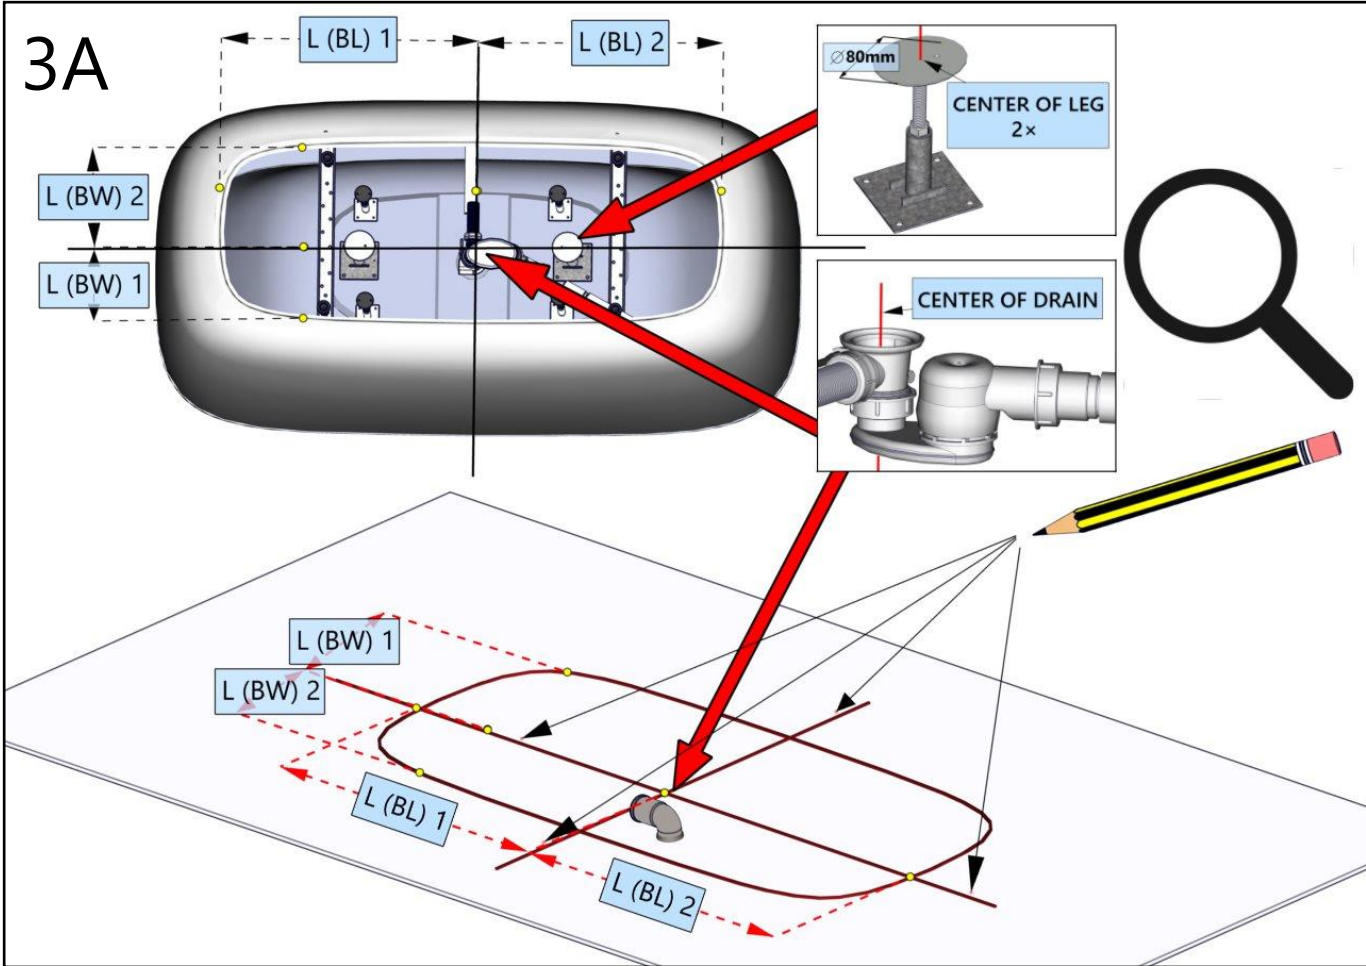

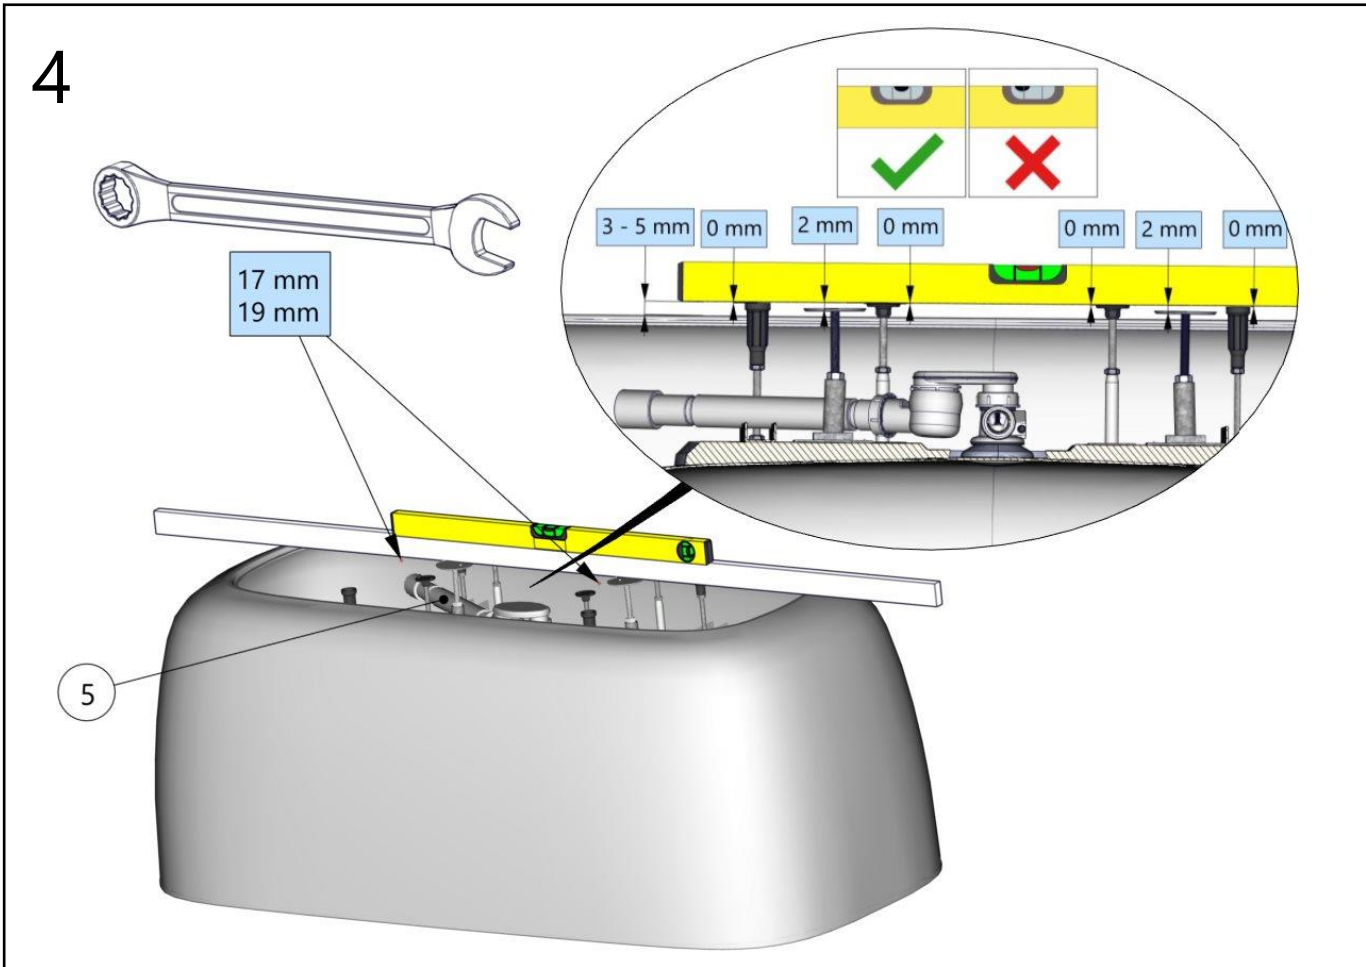
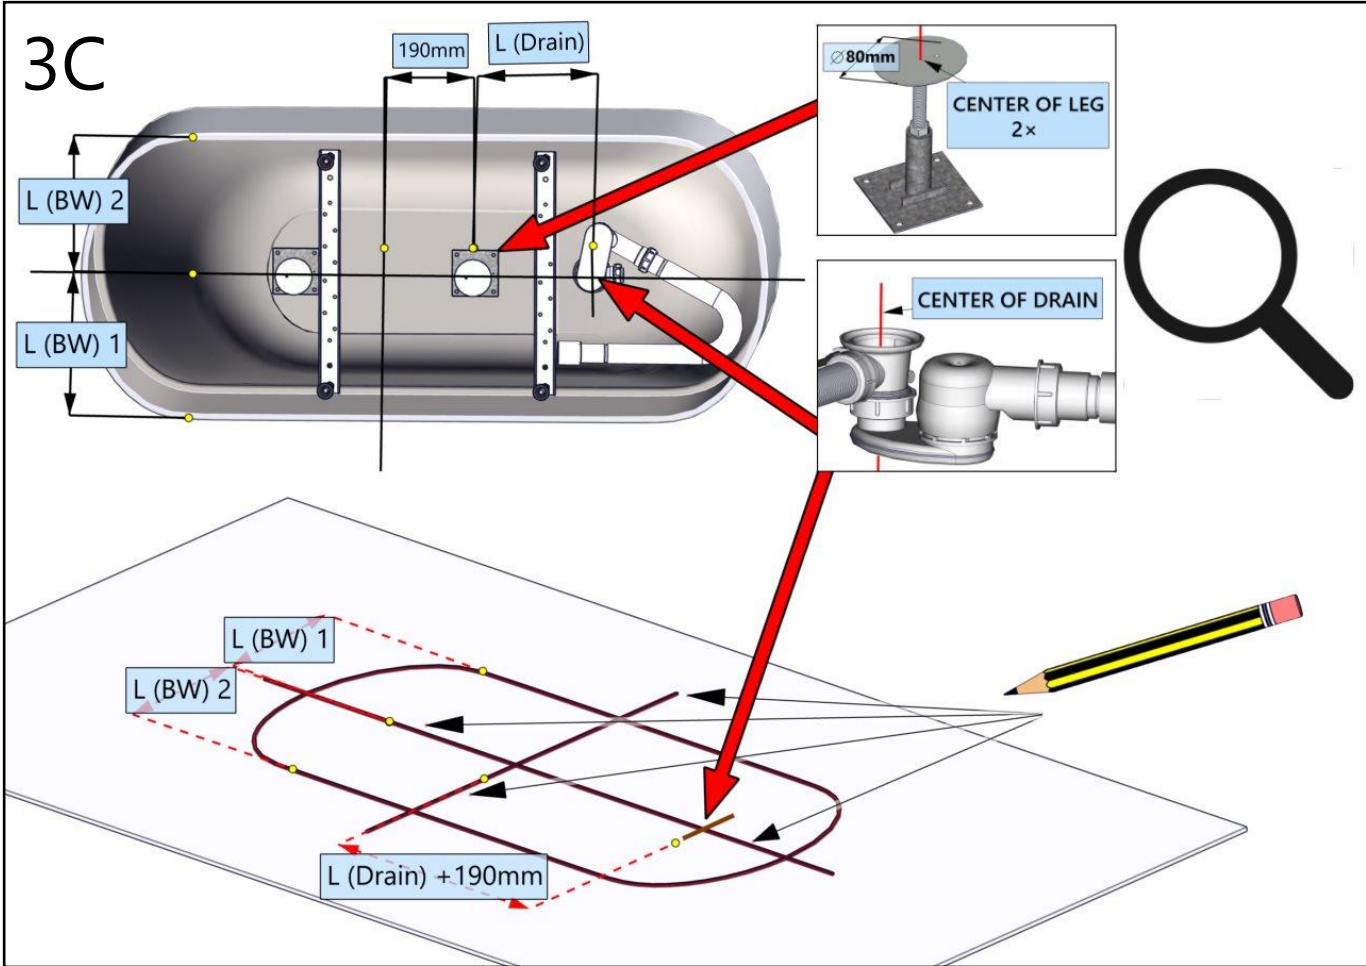


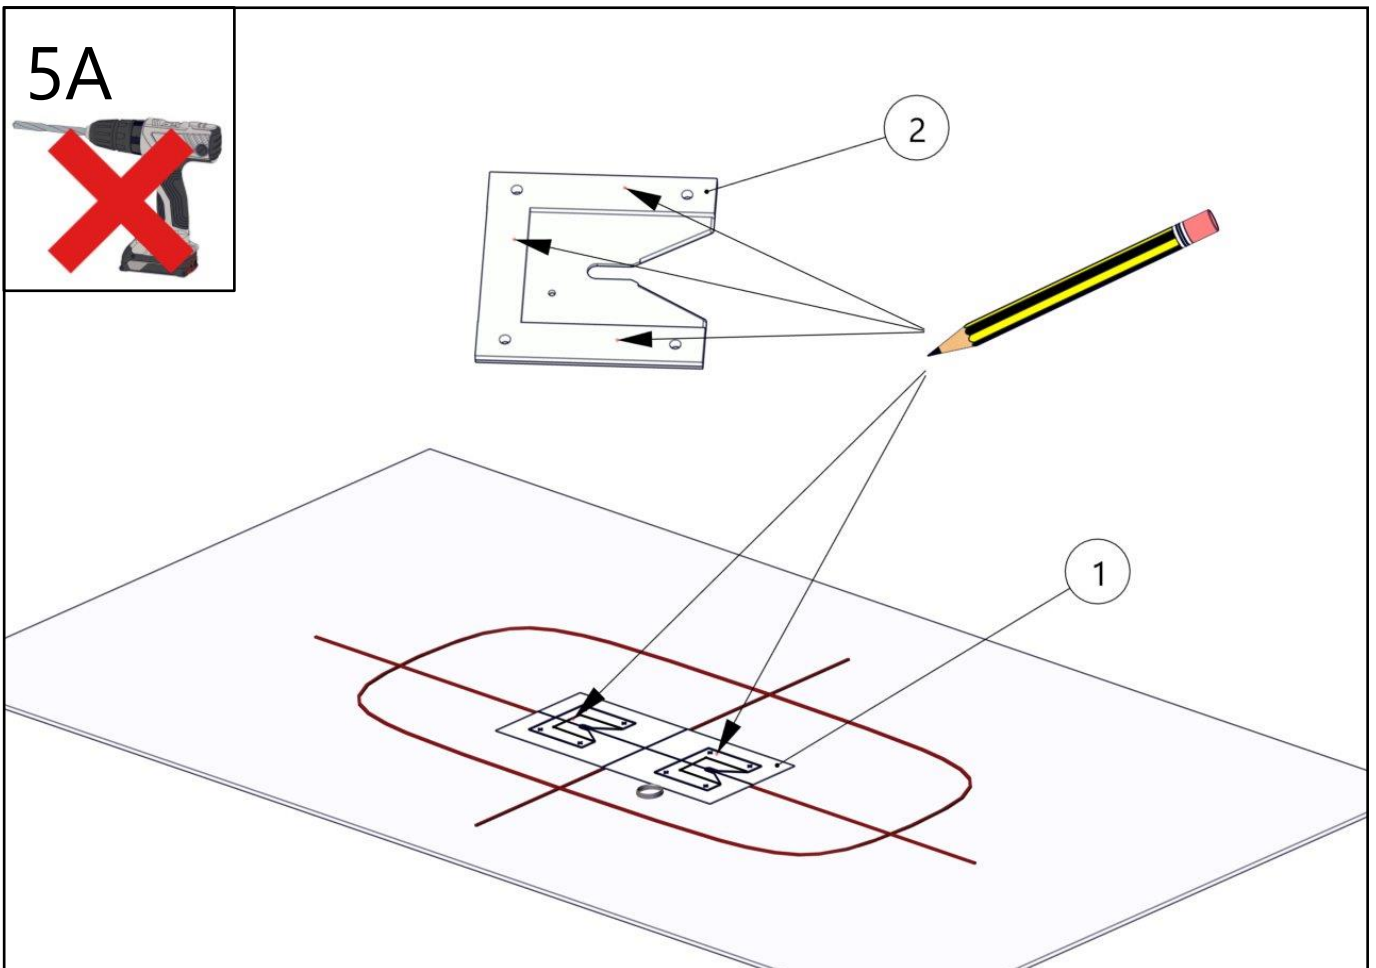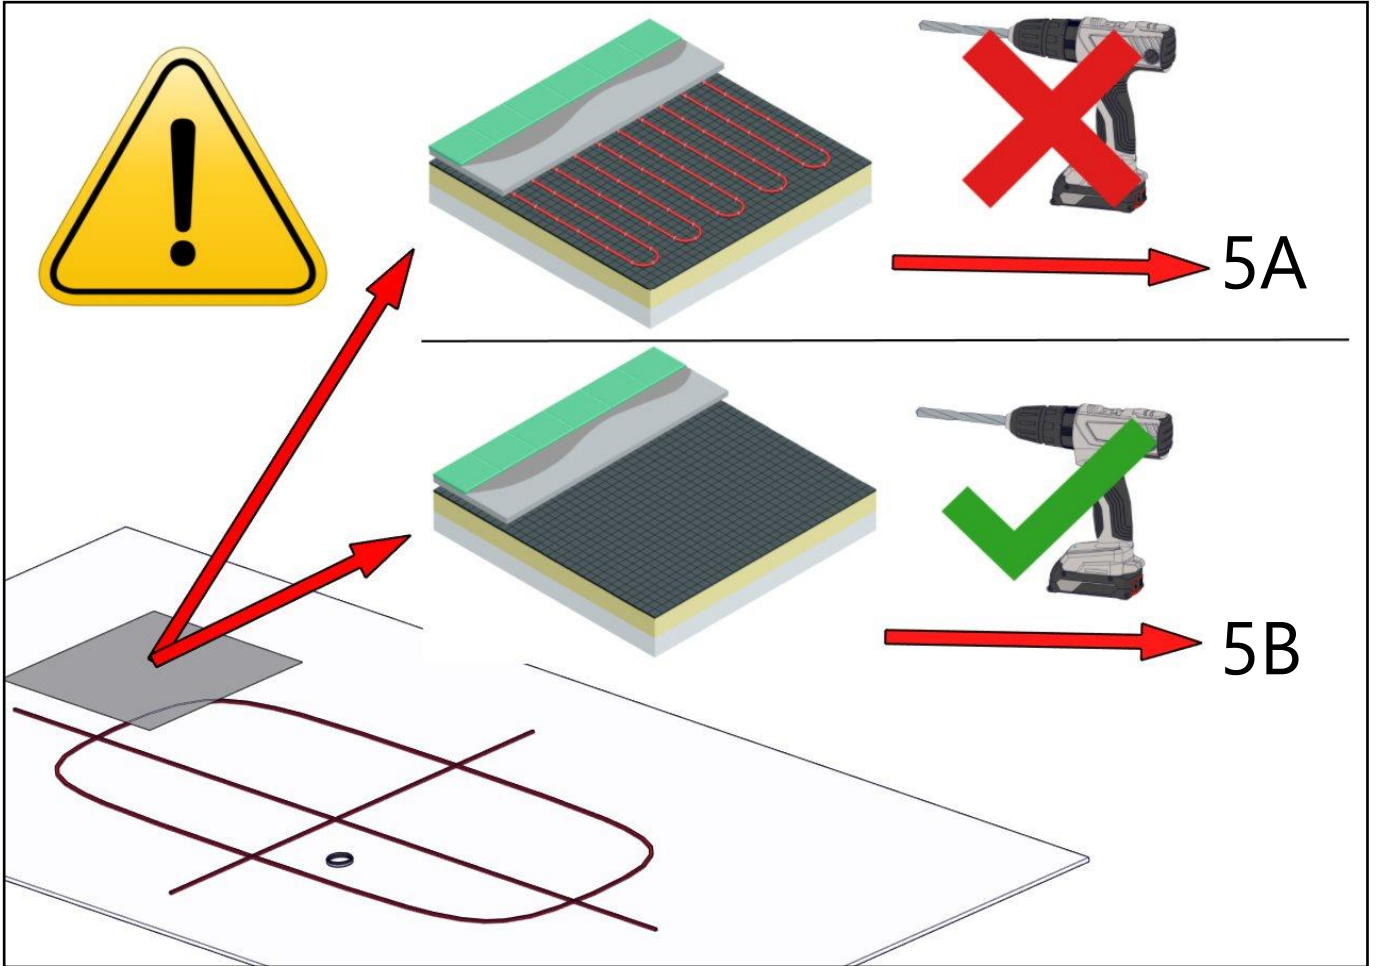


6A

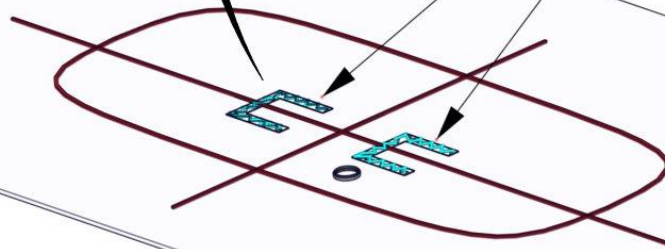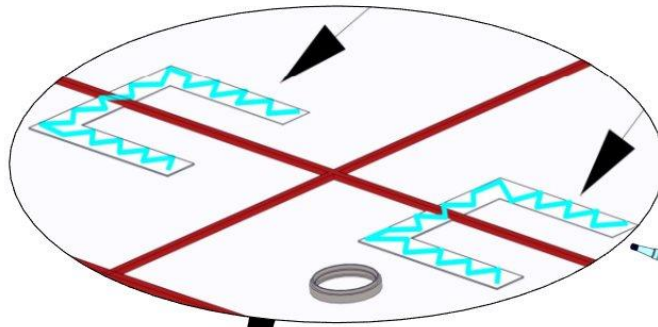

7A

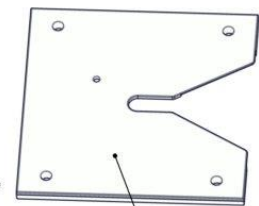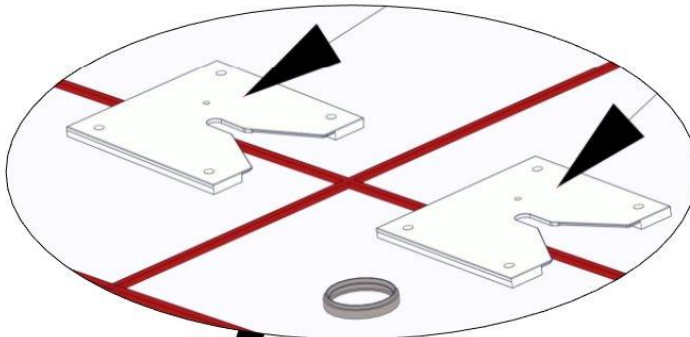


2

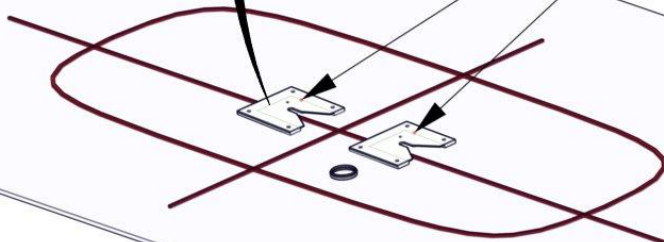


7A → 8




5B

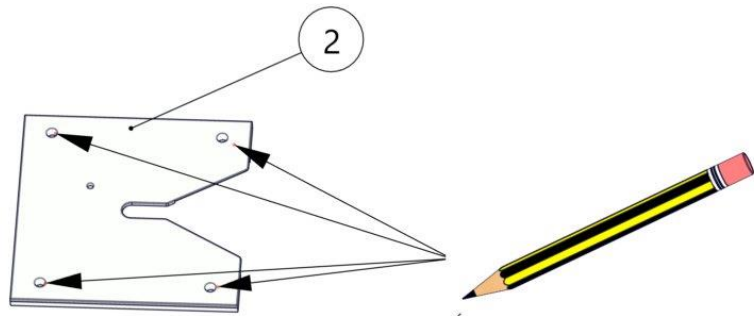


1

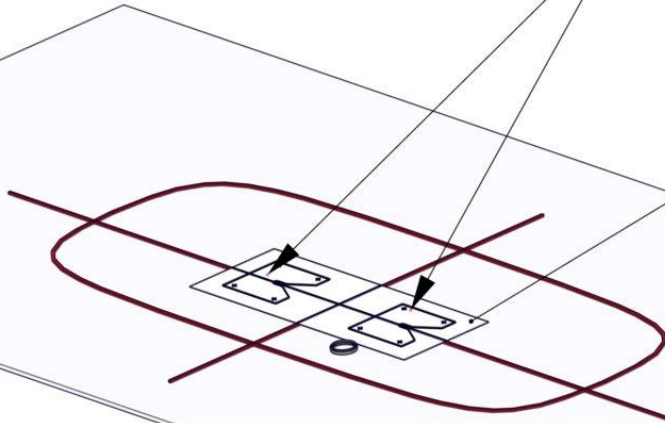


6B

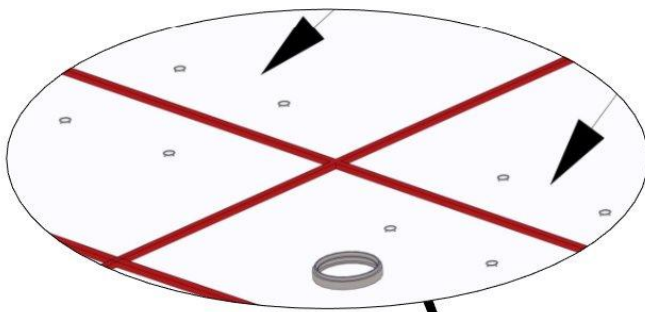

10 mm

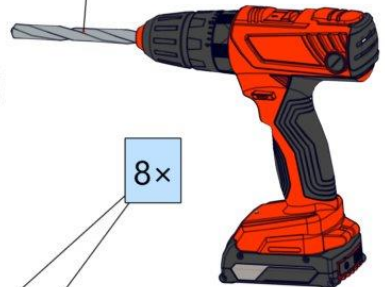

8x

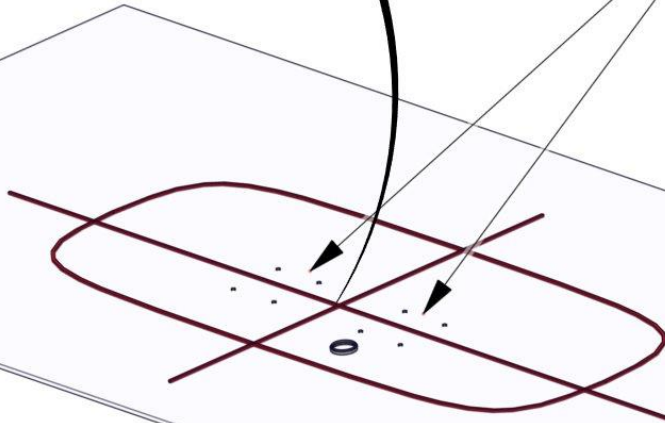





7B




10 mm

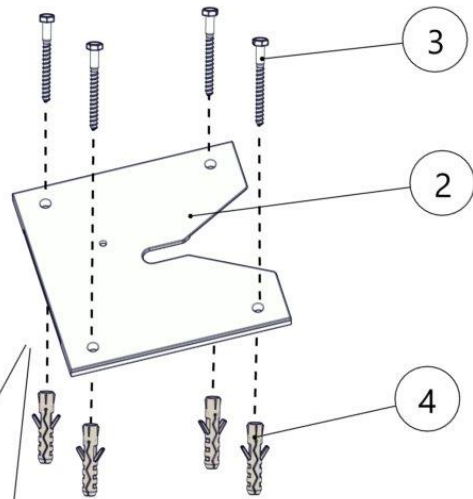

8

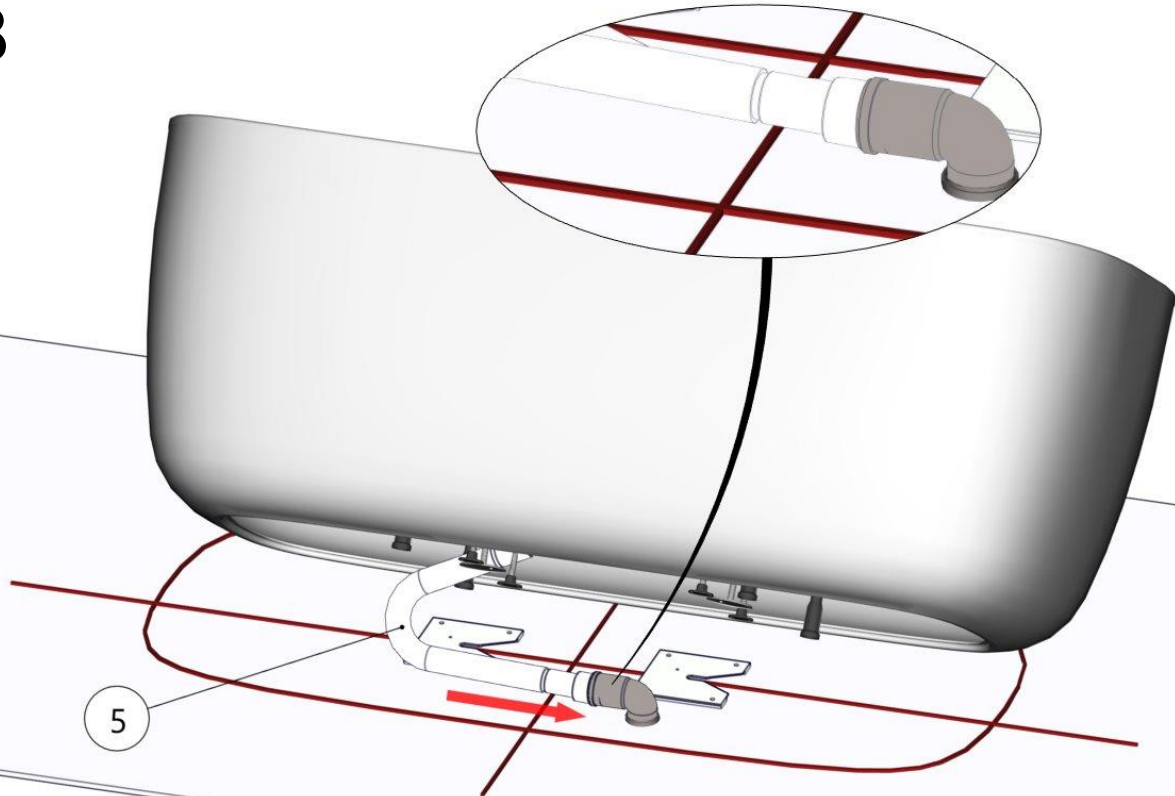

9

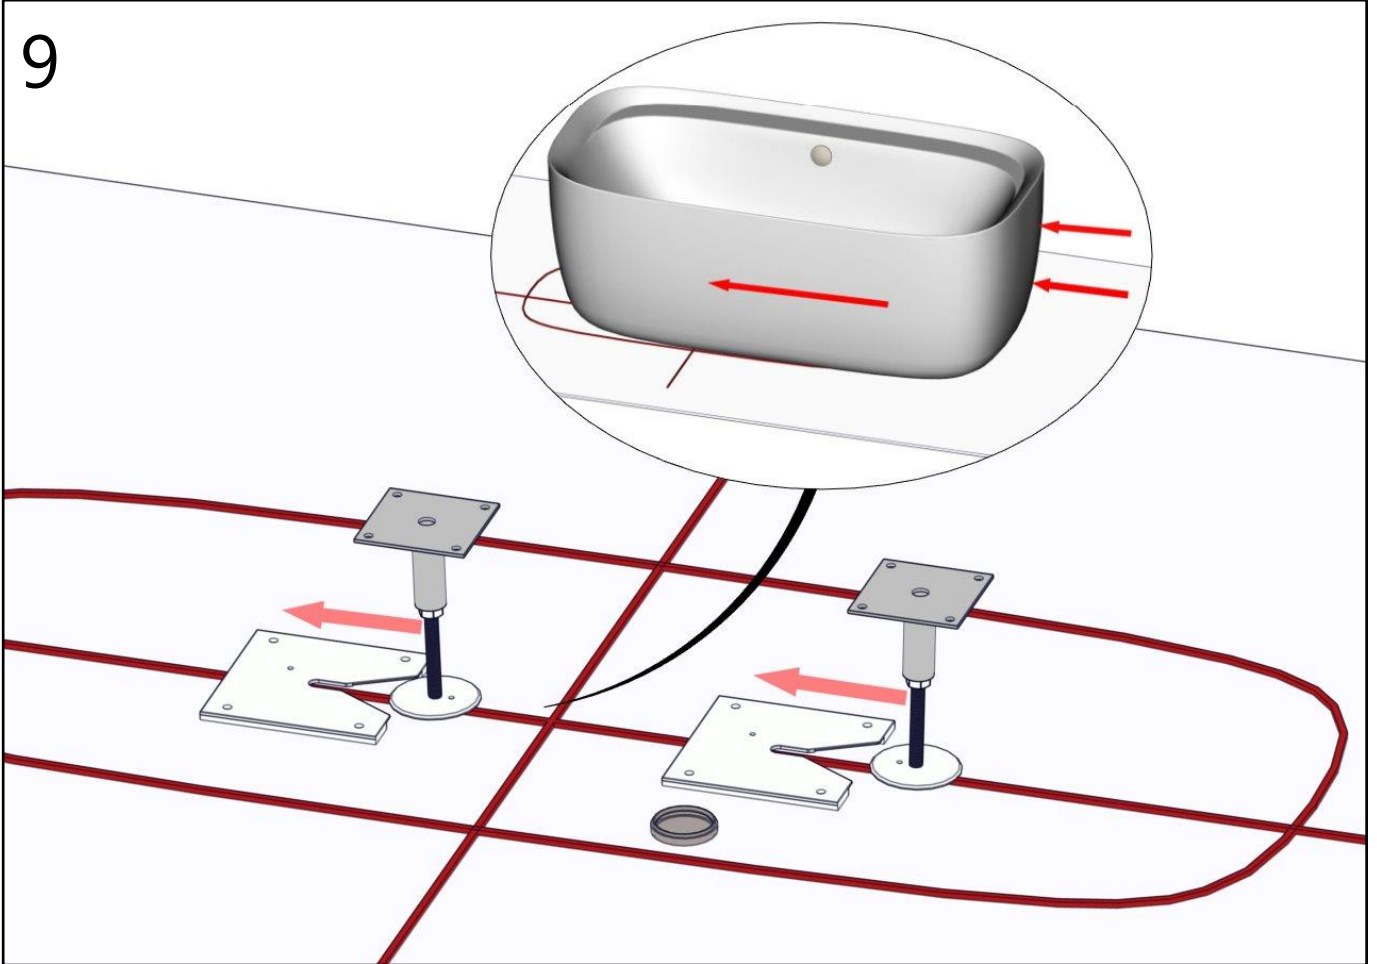

10

